

SELECT SCENE

MAIN [MIDI] [1][2][3]



SELECT PATTERN

MAIN [MIDI] [1][2][3]



PRO-TIP! YOU CAN ALSO SWITCH TO A SPECIFIC SCENE BY HOLDING [MAIN] AND TYPING THE NUMBER ON THE NUMPAD.

PRO-TIP! HOLD MULTIPLE GROUPS TO ADJUST ALL THEIR PATTERNS AT ONCE.

HOLD MAIN TO SELECT SCENE 01-99 WITH [MIDI] AND [+].

HOLD GROUP [MIDI] - [MIDI] AND PRESS [MIDI] AND [+] OR TYPE THE NUMBER IN WITH THE PADS TO SELECT PATTERN.

NEW PATTERN

MAIN [MIDI] [1][2][3]



 
UNDO

MAIN [MIDI] [1][2][3]



COPY

MAIN [MIDI] [1][2][3] [MIDI] [1][2][3]

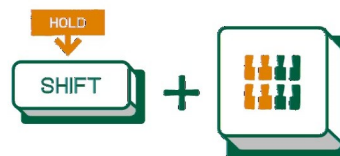

PASTE

MAIN [MIDI] [1][2][3] [MIDI] [1][2][3]



PRESS [SHIFT] AND [MIDI] TO FIND THE NEXT AVAILABLE EMPTY PATTERN.

PRESS [SHIFT] AND [MIDI] TO UNDO.

WHEN AN UNDO IS POSSIBLE THE HOUSE WILL LIGHT UP TO LET YOU KNOW.

PRESS [SHIFT] AND [MIDI] TO COPY.

PRESS ONCE FOR BAR AND TWICE FOR PATTERN. THE CURRENT BAR WILL BE COPIED.

PRESS [SHIFT] AND [MIDI] TO PASTE.

PRO-TIP! YOU CAN NAVIGATE THROUGH BARS USING [SHIFT] AND [MIDI] AND [+].

COMMIT

MAIN [MIDI] [1][2][3]



CHANGE PROJECT

MAIN [MIDI] [1][2][3]



INPUT GAIN



SEND LEVEL



 
PRESS [SHIFT] AND [MAIN] TO [COMMIT].

HOLD [MAIN] AND SELECT PADS 1-9 TO CHANGE PROJECT.

TURN THE [X] KNOB TO ADJUST THE INPUT VOLUME.

TURN THE [Y] KNOB TO ADJUST THE INTERNAL FX SEND LEVEL.


THIS WILL DUPLICATE THE CURRENT SCENE AND ALLOW YOU TO SAVE YOUR IDEAS BEFORE MOVING ON TO THE NEXT ONE!

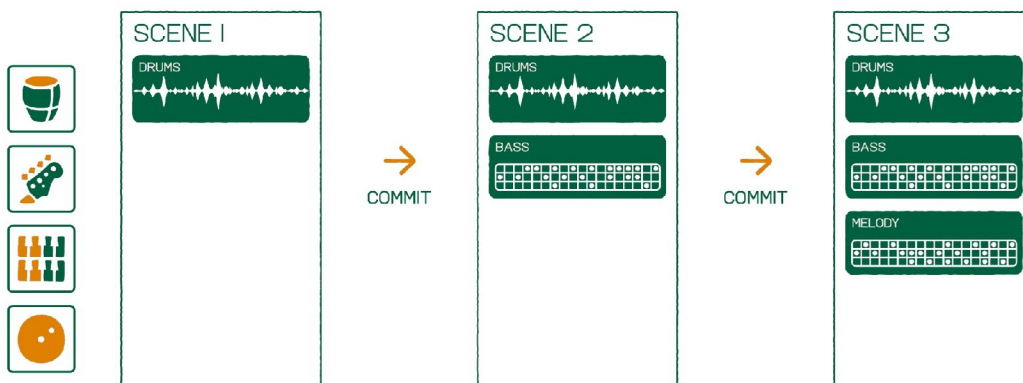

8.3.1 SONG MODE


SONGS CAN HAVE A MAXIMUM LENGTH OF 99 SCENES.

 ENTER SONG LIST EDITOR

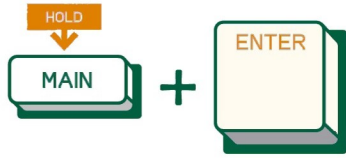

HOLD **MAIN** THEN PRESS THE **[ENTER]** PAD TO ENTER THE SONG LIST EDITOR.

 SONG POSITION



WHEN IN THE SONG LIST EDITOR THE SCREEN WILL SHOW THE CURRENT SONG POSITION.

NEXT SONG POSITION



TO GO TO THE NEXT SONG POSITION PRESS **[+]** AND TO GO TO THE PREVIOUS SONG POSITION PRESS **[-]**.

ADD TO SONG LIST



HOLD **SHIFT** AND PRESS **[Scene Icon]** TO ADD A NEW SCENE TO THE SONG LIST. WHEN YOU FIRST MAKE A SONG ARRANGEMENT THERE WILL ONLY BE ONE SCENE IN THE SONG LIST.

CHANGE SCENE



HOLD **SHIFT** AND PRESS **[-]** OR **[+]** TO SWITCH THE SCENE THAT WILL PLAY ON THE CURRENT SONG POSITION.

PRO TIP! YOU CAN ALSO HOLD **SHIFT** AND TYPE THE SCENE NUMBER ON THE NUMPAD.

CUT SCENE



WHILE IN THE SONG LIST EDITOR HOLD **SHIFT** AND PRESS **[Grid Icon]** TO CUT THE CURRENT SCENE TO THE CLIPBOARD.

INSERT SCENE



HOLD **SHIFT** AND PRESS **[Play Icon]** TO INSERT A SCENE INTO THE SELECTED SONG POSITION.

PLAY



PRESS **PLAY** TO PLAY THE SONG FROM THE CURRENTLY SELECTED SONG POSITION.

YOU CAN ALSO PLAY THE SONG WITHOUT ENTERING THE SONG LIST EDITOR BY HOLDING **MAIN** AND PRESSING **PLAY**.

PLAY FROM START



PRESS **SHIFT** AND **PLAY** TO PLAY THE SONG FROM THE START.