


GAIN

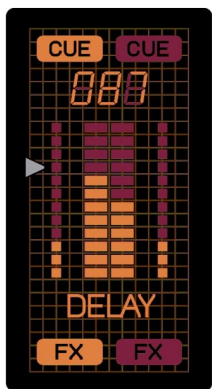

VIEW GAIN



+

HOLD!



WHEN IN THE MAIN SCREEN, HOLD **[SELECT]** AND TURN THE GAIN KNOB TO ADJUST THE GAIN AND SEE IT'S VALUE.

GAIN



WHEN IN THE MAIN SCREEN, TURN THE GAIN KNOB TO INCREASE OR DECREASE THE GAIN ON A CHANNEL.


CHANNEL SCREEN

HOLD!



+

CLICK!

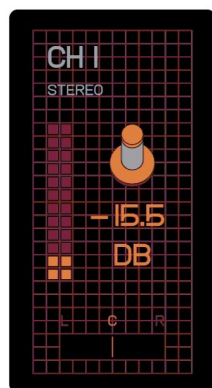

HOLD **[SELECT]** AND CLICK THE GAIN KNOB TO VIEW THE CHANNEL SCREEN.

PAN

EXIT CHANNEL SCREEN

HOLD!



+




HOLD **[SELECT]** AND ROTATE THE GAIN KNOB TO ADJUST PAN. THIS WILL MOVE THE AUDIO LEFT OR RIGHT.

PRESS **[SELECT]** TO EXIT THE GAIN MENU AND RETURN TO THE MAIN SCREEN.

COMPRESSOR MENU

CLICK!

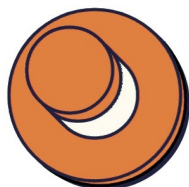

CLICK THE GAIN KNOB TO ENTER THE COMPRESSOR MENU. YOU CAN VIEW AND EDIT THE COMPRESSOR.

COMPRESSOR TYPE


HOLD!



+



WHEN IN THE COMPRESSOR MENU, HOLD **[SELECT]** AND ROTATE THE GAIN KNOB TO SELECT THE COMPRESSOR TYPE.

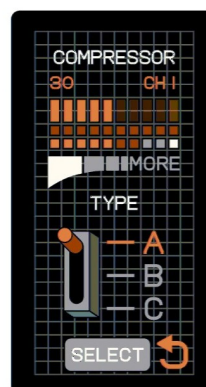

COMPRESSION

ROTATE THE GAIN KNOB TO CHANGE THE AMOUNT OF COMPRESSION.



PRESS **[SELECT]** TO EXIT THE COMPRESSOR MENU AND RETURN TO THE MAIN SCREEN.

6.5 THE FADERS

APPLIES NO POSITIVE GAIN. WHEN 0 NO AUDIO FROM CHANNEL.

LEVEL

MOVE THE FADER UP TO INCREASE THE LEVEL OF THE CHOSEN CHANNEL OR DOWN TO DECREASE IT.



CHECK LEVEL

HOLD!




+




HOLD **[SELECT]** AND MOVE A FADER TO SEE THE EXACT LEVEL ON THAT CHANNEL.

ONLY APPLY TO THE MAIN MIX AND NOT THE CUE MIX, UNLESS MAIN CUE HAS BEEN ENABLED.

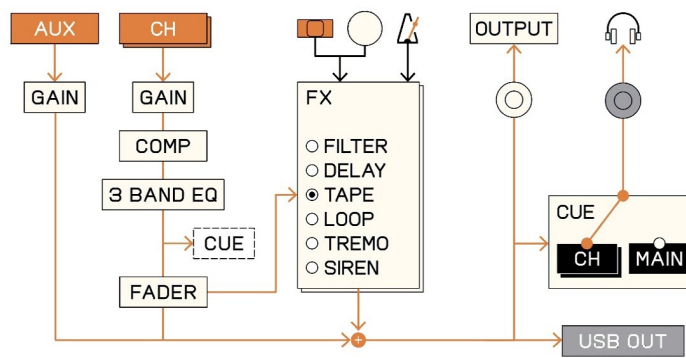

CUE

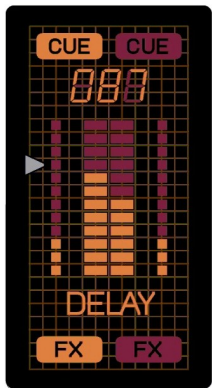

CUE

PRESS THE **CUE** BUTTON ON A CHANNEL TO SEND THE AUDIO FROM THAT CHANNEL THROUGH THE CUE OUTPUT. BY DEFAULT,



WHEN SENDING TO CUE THE LEVEL AND FX WILL BE BYPASSED, THE DETECTED BPM WILL SHOW ON THE SCREEN.

MAIN CUE

PRESSING AND HOLDING BOTH **CUE** BUTTONS TOGETHER WILL ENABLE MAIN CUE, THIS SENDS THE MAIN OUTPUT THROUGH THE CUE OUTPUT,

HOLD!




+



GREAT FOR WHEN YOU JUST WANT TO MONITOR YOUR MIX. PRESS EITHER OF THEM AGAIN TO TURN IT OFF.

TEMPO SCREEN

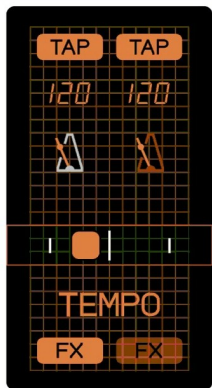

TEMPO SCREEN



+



PRESS **SELECT** AND **CUE** TO ENTER THE TEMPO SCREEN. HERE YOU CAN VIEW AND EDIT THE DETECTED TEMPO ON A CHANNEL.

TAP TEMPO

TAP!



WHILE IN THE TEMPO SCREEN, TAP **CUE** ON THE CHANNEL YOU WISH TO EDIT THE TEMPO OF REPEATEDLY.

ENABLE/DISABLE TEMPO TRACKING

HOLD!



+

HOLD!



PRESS AND HOLD ONE OR BOTH OF THE **CUE** BUTTONS WHILE IN THE TEMPO SCREEN TO ENABLE TEMPO TRACKING ONLY ON THOSE CHANNELS. THE SELECTED TEMPO SOURCE WILL SYNC EFFECTS.


YOU CAN CHOOSE TO HAVE ONE TEMPO SOURCE USED BY BOTH EFFECTS OR HAVE EACH EFFECT USE THE TEMPO FROM ITS RESPECTIVE CHANNEL.

EXIT TEMPO



PRESS **SELECT** TO EXIT THE TEMPO SCREEN.

OPEN SYSTEM MENU

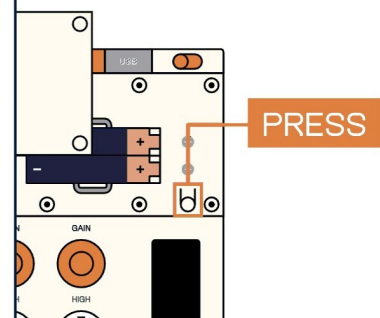

RETURN TO MAIN

TO MOVE THE CURSOR AND SCROLL THROUGH THE LIST OF SETTINGS USE THE MOD STICK.

TO SELECT AN ITEM FROM THE LIST, PRESS **SELECT**.

WHEN IN A SYSTEM SETTING, USE THE MOD STICK TO ADJUST THE PARAMETERS FOR THAT SETTING.

PRESS **SELECT** TO CONFIRM THE ADJUSTED PARAMETER AND MOVE TO THE NEXT PARAMETER. WHEN REACHING THE END PRESS SELECT TO RETURN TO THE MAIN SYSTEM MENU.

PRESS THE SYSTEM BUTTON UNDER THE BATTERY LID TO OPEN THE SYSTEM MENU.

PRESS THE SYSTEM BUTTON TO RETURN TO THE MAIN SCREEN.